



# LG Encore GT550 Audio Jack Replacement

This guide will tell the user how to replace the audio jack.

Written By: Lindsey Harding





## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Audio Jack



- Remove back cover.

 
## Step 2



- Remove battery.



## Step 3

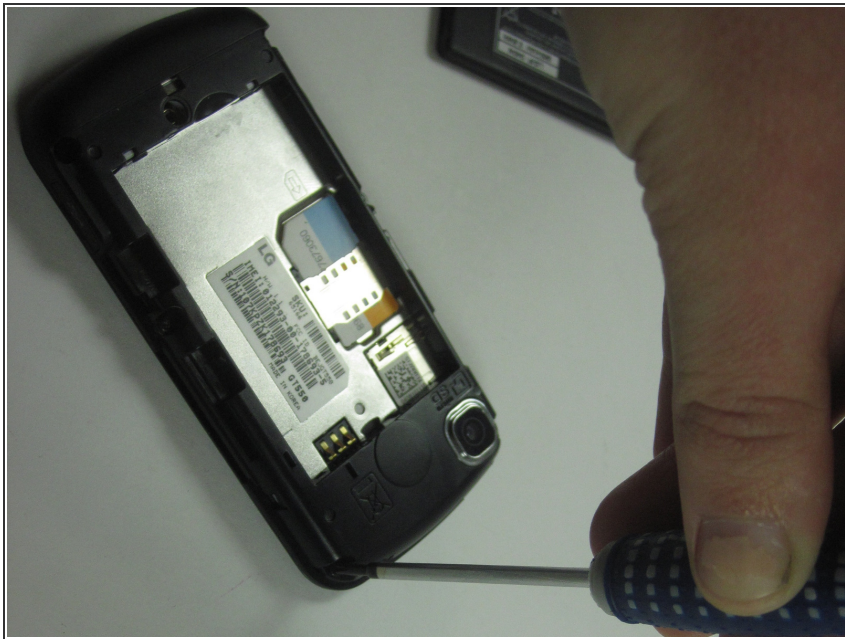


- Remove the six screws around the outside using the Phillips head screwdriver.

## Step 4



 - Using the iOpener, separate the phone.

## Step 5

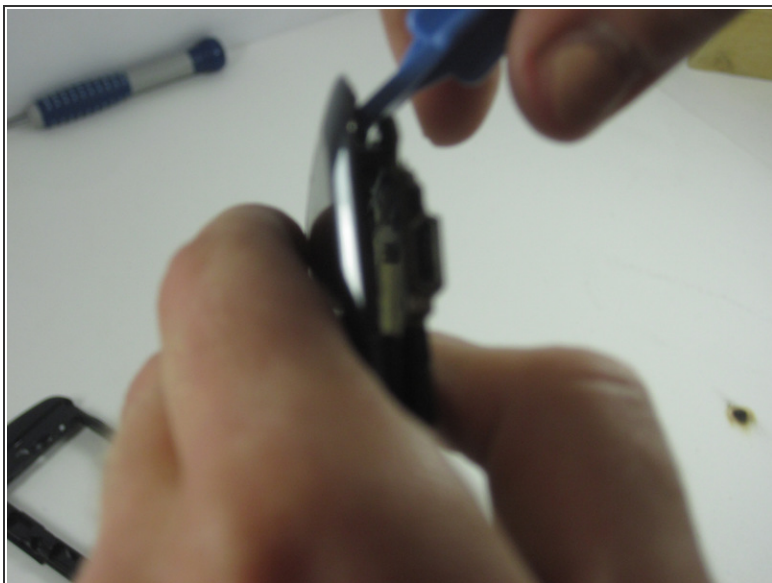

- Using the iOpener, separate the screen and the motherboard.

## Step 6



- Push the audio jack out and replace it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-27 04:56:51 AM.

